





Detail of damper elbow fitted to stub on throttle body.


Best to take off the plastic tank cover and the trim panel to save the paint if you slip with pliers etc.

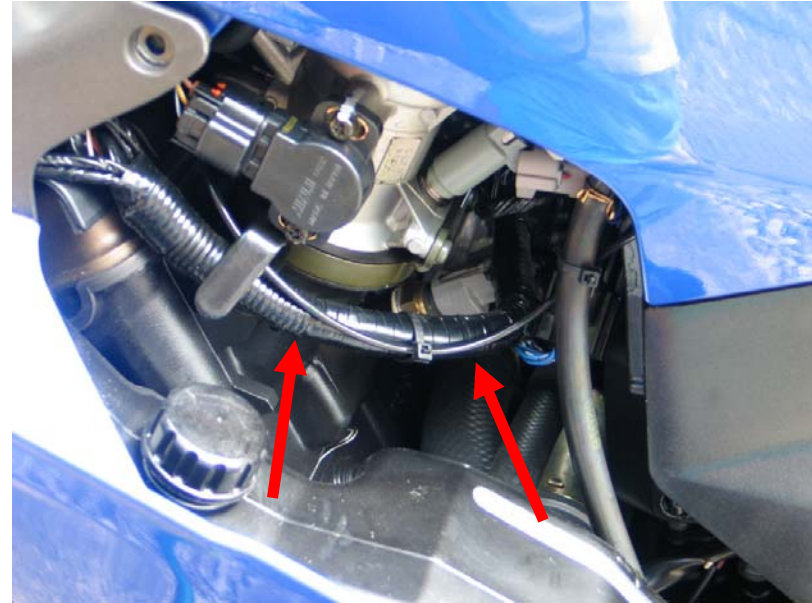


Overall picture of the vacuum tube clipped to the wiring loom and passing through to the back of the bike

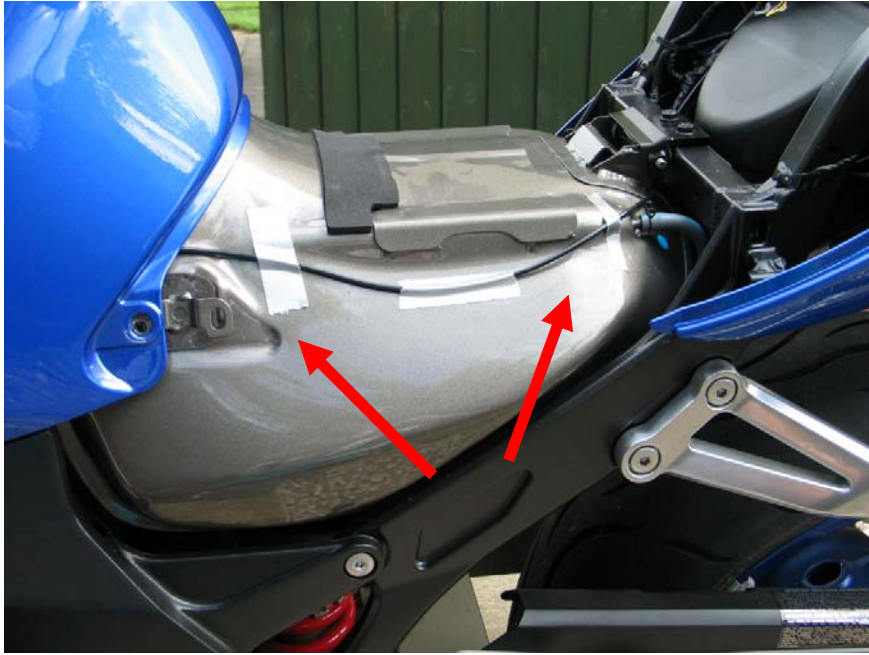


Remove seat and use some duct tape or similar to secure the pipe to the tank.

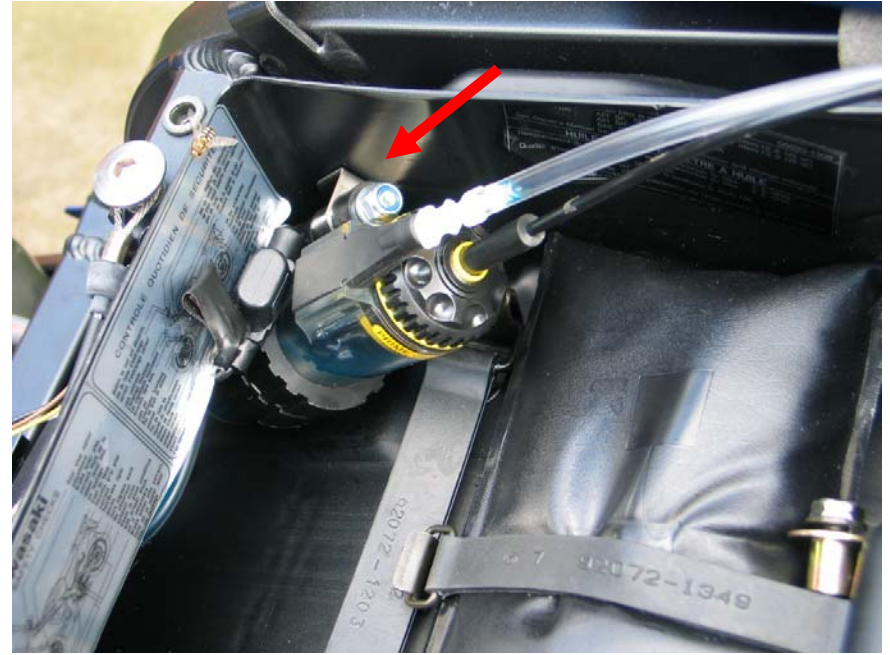

Drill a 1/4" hole in the side of the tool storage area for the RMV mount. The RMV will fit neatly into the "U" lock slot as shown.

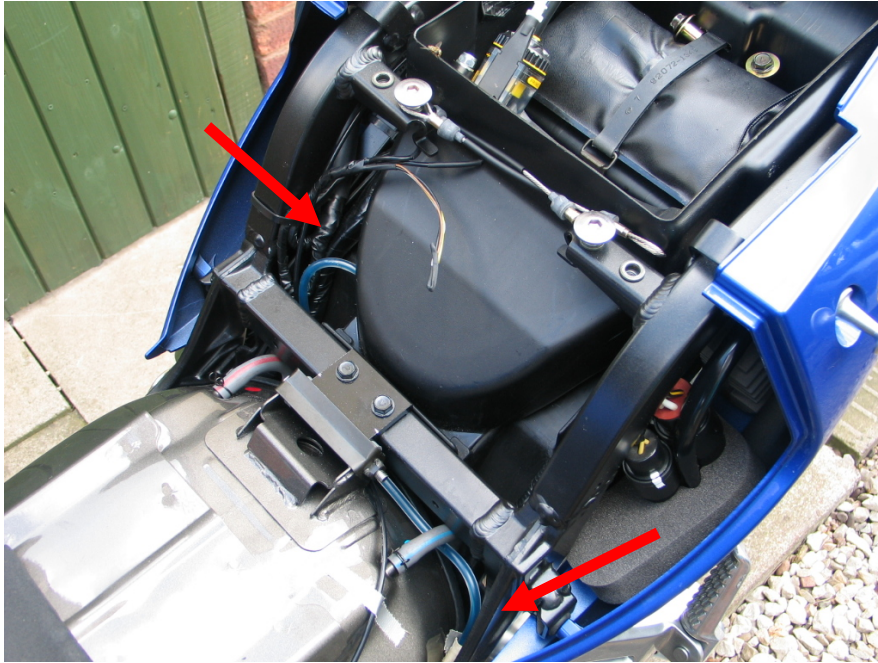

The delivery tube is fed through a ¼" hole drilled in the base of the "U" lock slot as shown. (see detail right) The tube is routed behind the tank and down the frame tube / tank line.

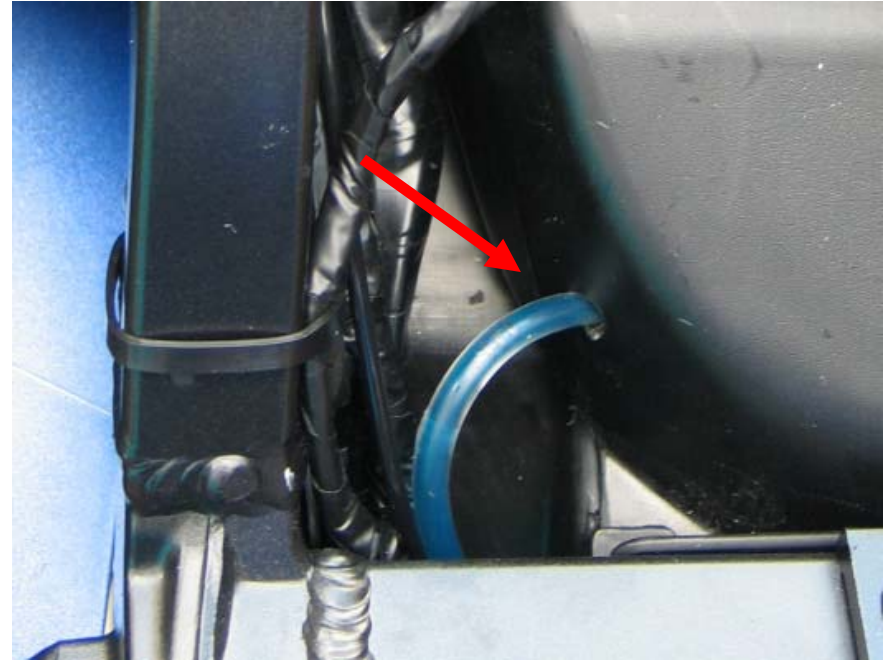





Delivery tube installed on rear spindle with plate adjusted to sprocket at between 6-7 o'clock.